

Synco™ 200

## Signal Converter

## SEZ220

---

**With preprogrammed standard applications**  
**Freely programmable**  
**Menu-driven operation**

### Use

---

The signal converter is for use in HVAC plant to  
provide minimum / maximum selection or averaging of up to 5 passive or active  
input signals  
calculate enthalpy, enthalpy differentials, absolute humidity or dew points from  
passive temperature and active humidity signals  
convert 1 passive input signal into 2 active signals  
double signals for the sequential control of pumps, valves and fans

## Functions

---

### Universal inputs

Universal inputs for 5 passive or active analog input signals of various measured values (°C, %, ---).

### Function modes

Minimum / maximum / average (MIN-MAX-AVR)

- Selection of maximum input signal from the inputs IN 1 – IN 5
- Selection of minimum input signal from the inputs IN 1 – IN 5
- Calculation of average value of the inputs IN 1 – IN 5
- For calculating the average value, input IN1 can be weighted. This means that, for making the calculation, the number of input signals can be increased several times over

If, in addition, configuration parameter SPLIT is activated, the functions will be assigned to the inputs X1 – X2 and X3 – X5. This means, e.g.:

- Selection of maximum input signal from the inputs IN 1 – IN 2
- Selection of maximum input signal from the inputs IN 3 – IN 5
- Selection of minimum input signal from the inputs IN 1 – IN 2
- Selection of minimum input signal from the inputs IN 3 – IN 5
- Calculation of average value of the inputs IN 1 – IN 2
- Calculation of average value of the inputs IN 3 – IN 5

Enthalpy processor (ENTHALPY)

- Calculation of enthalpy from 1 passive temperature signal and 1 active humidity signal
- Calculation of absolute humidity from 1 passive temperature signal and 1 active humidity signal
- Calculation of enthalpy differential from 2 signal groups each delivering 1 passive temperature signal and 1 active humidity signal
- Calculation of dew point temperature from 1 passive temperature signal and 1 active humidity signal

Signal doubling / signal inversion (2X-INV)

- Signal doubling for the sequential control of pumps, valves and fans
- Signal conversion from 1 passive temperature signal into 2 active temperature signals

The functions can be combined as required by the application.

## Ordering

---

When ordering, please give name and type reference.

The products listed under "Accessories" must be ordered as separate items.

## Product documentation

---

<i>Document type</i>	<i>Document number</i>
Basic Documentation	<b>CE1P5146en</b>
Instructions set (mounting, commissioning, operation)	<b>74 319 0425 0</b>
Declaration of Conformity (CE)	<b>CE1T5146xx</b>
Environmental Declaration	<b>CE1E5146en</b>

## Technical design

The signal converter has 13 applications ready programmed. When commissioning a plant, the relevant basic type must be entered. All associated functions, terminal assignments, settings and displays will then automatically be activated, and parameters not required will be deactivated.

In addition, 1 empty application (basic type M) is loaded.

With the help of the built-in operation or the OCI700.1 service tool, the signal converter offers the following choices:

Activation of a preprogrammed application (refer to "Preprogrammed standard application")

Modification of a preprogrammed application

Free configuration of applications

For operating actions of the functions, refer to the Basic Documentation.

## Mechanical design


The signal converter consists of terminal base and insert with built-in operation.

The terminal base can be fitted to a DIN mounting rail or is screwed directly on a flat surface. It consists of a plastic housing with 2 terminal levels.

The insert engages in the terminal base. It consists of a plastic housing which accommodates the printed circuit boards.

Controller operation is fully integrated.

## Operating, display and connecting elements

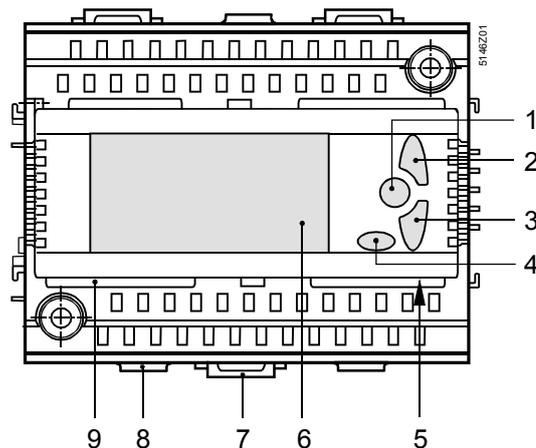

## Legend

- |   |   |
|---|---|
| 1 | OK button for confirming the selected menu line or the value entered              |
| 2 | Navigation button, upward (+) for selecting the menu line or changing the value   |
| 3 | Navigation button, downward (-) for selecting the menu line or changing the value |
| 4 | ESC button for returning to the previous menu or rejecting the value entered      |
| 5 | Connection facility for the service tool (RJ45 connector)                         |
| 6 | Display   |
| 7 | Catch for fitting the signal converter to a top hat rail                          |
| 8 | Fixing facility for a cable tie (cable strain relief)                             |
| 9 | Rest for the terminal cover   |

## Accessories

Name	Type reference
Mounting frame for flush panel mounting (consisting of 1 small frame, 1 large frame, 2 hexagonal spacers, 4 fixing screws, Mounting Instructions)	<b>ARG62.201</b>

## Engineering notes

---



- You have to use an external supply line protection with a slow fuse of max. 10 A or a circuit breaker of max. 13 A with the characteristic B, C, D according to EN 60898 or a power source with current limitation of max. 10 A.
- Fuses, switches, wiring and earthing must be in compliance with local regulations
- Sensor wires should not be run parallel to mains carrying wires that power fans, actuators, pumps, etc.
- It is recommended to use the standard applications provided (refer to "Preprogrammed standard applications"). Specific plant situations may require certain adaptations however

## Mounting and installation notes

---

The signal converter is designed for:

- Mounting in a standard cabinet to DIN 43 880
- Wall mounting on an existing top hat rail (to EN 50 022-35x7.5)
- Wall mounting using 2 fixing screws
- Flush panel mounting with ARG62.201 mounting frame

Not permitted are wet or damp spaces. The permissible environmental conditions must be observed

Disconnected the system from power supply prior to mounting the signal converter

**The insert may not be removed from the terminal base!**

Each terminal (spring cage terminal) can accommodate only 1 solid wire or 1 stranded wire. For making the connections, the cables must be stripped for 7 to 8 mm. To introduce the cables into the spring cage terminals and to remove them, a screwdriver size 1 is required. Cable strain relief can be provided with the help of the fixing facility for cable ties

The signal converter is supplied complete with Installation Instructions and Operating Instructions

## Commissioning notes

---

The configuration and parameters of the standard applications offered by the controller can be changed any time by service staff who have been trained by HVAC Products and who have the required access rights, either locally or online/offline with the service tool

During the commissioning process, the application is deactivated and the outputs are in a defined off state

On completion of the configuration, the signal converter automatically makes a new start

When leaving the commissioning pages, the peripheral devices connected to the universal inputs are automatically tested and identified. If a peripheral device is missing, a fault status message will be delivered

If adaptations to specific plants are required, they must be recorded and the documentation kept inside the control panel

For the procedure to be followed when starting up the plant for the first time, refer to the Installation Instructions

## Disposal notes



The devices are considered electronics devices for disposal in terms of European Directive 2012/19/EU and may not be disposed of as domestic garbage.

- Dispose of the devices through channels provided for this purpose.
- Comply with all local and currently applicable laws and regulations.


## Technical data

<b>Power supply</b> (G, G0)	Operating voltage	AC 24 V $\pm$ 20 % (SELV)
	Frequency	50/60 Hz
	Power consumption	5 VA
	External supply line protection	Fuse slow max. 10 A or Circuit breaker max. 13 A Characteristic B, C, D according to EN 60898 or Power source with current limitation of max. 10 A
<b>Universal inputs</b> Measured value inputs (X1...X5)	Number	5
	Signal sources	
	Passive	LG-Ni 1000, T1, Pt 1000, 0...1000 $\Omega$ 2x LG-Ni 1000 (averaging)
	Active	DC 0...10 V
<b>Outputs</b> Positioning outputs (Y...)	Number	2
	Output voltage	DC 0...10 V
	Output current	$\pm$ 1 mA
	Max. load	continuous short-circuit
Power supply external devices (G1)	Voltage	AC 24 V
	Current	max. 4 A
<b>Interfaces</b>	Service tool connection facility	RJ45 connector
<b>Perm. cable lengths</b>	For passive measuring and positioning signals	(measuring errors can be corrected)
	Type of signal	
	LG-Ni 1000, T1	max. 300 m
	Pt 1000	max. 300 m
	0...1000 $\Omega$	max. 300 m
	For DC 0...10 V measuring and control signals	refer to Data Sheet of the signal delivering device
<b>Electrical connections</b>	Connection terminals	spring cage terminals
	For wires	0.6 mm dia....2.5 mm <sup>2</sup>
	For stranded wires without ferrules	0.25...2.5 mm <sup>2</sup>
	For stranded wires with ferrules	0.25...1.5 mm <sup>2</sup>
<b>Degrees of protection</b>	Degree of protection of housing to IEC 60 529	IP 20 (when mounted)
	Safety class to EN 60 730	device suited for use with equipment of safety class II

<b>Ambient conditions</b>	Operation to	IEC 60 721-3-3
	Climatic conditions	class 3K5
	Temperature (housing and electronics)	0...50 °C
	Humidity	5...95 % r.h. (non-condensing)
	Mechanical conditions	class 3M2
	Transport to	IEC 60 721-3-2
<b>Classifications to EN 60 730</b>	Climatic conditions	class 2K3
	Temperature	-25...+70 °C
	Humidity	<95 % r.h.
	Mechanical conditions	class 2M2
	Mode of operation, automatic controls	type 1B
	Degree of contamination, controls' environment	2
<b>Materials and colors</b>	Software class	A
	Rated surge voltage	4000 V
	Temperature for ball-pressure test of housing	125 °C
<b>Standards, directives and approvals</b>	Terminal base	Polycarbonate, RAL 7035 (light-grey)
	Controller insert	Polycarbonate, RAL 7035 (light-grey)
	Packaging	corrugated cardboard
<b>Standards, directives and approvals</b>	Product standard	EN 60730-1 Automatic electrical controls for household and similar use
	Electromagnetic compatibility (Applications)	For use in residential, commerce, light-industrial and industrial environments
	EU conformity (CE)	CE1T5146xx *)
	EAC conformity	Eurasia conformity
	UL certification (US)	UL 916, <a href="http://ul.com/database">http://ul.com/database</a>
	<b>Environmental compatibility</b>	The Product environmental declaration contains data on RoHS compliance, materials composition, packaging, environmental benefit and disposal.
*) The documents can be downloaded from <a href="http://siemens.com/bt/download">http://siemens.com/bt/download</a> .		
<b>Weight</b>	Excl. packaging	0.293 kg

## Connection diagrams

### Internal diagram

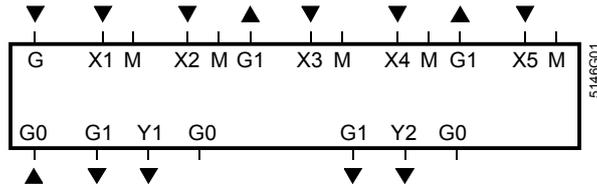


- G, G0 Rated voltage AC 24 V
- G1 Output voltage AC 24 V for powering external active sensors
- M Measuring neutral for signal input
- G0 System neutral for signal output
- X... Universal signal inputs (analog signals only)  
for LG-Ni 1000, 2x LG-Ni 1000 (averaging), T1, Pt 1000, DC 0...10 V, 0...1000 Ω
- Y... Control or status outputs, analog DC 0...10 V

### Note

Each terminal (spring cage terminal) can only accommodate 1 solid wire or 1 stranded wire. Double terminals are internally interconnected.

## Connection diagrams

### Connection of 2 passive sensors on the input side (averaging)

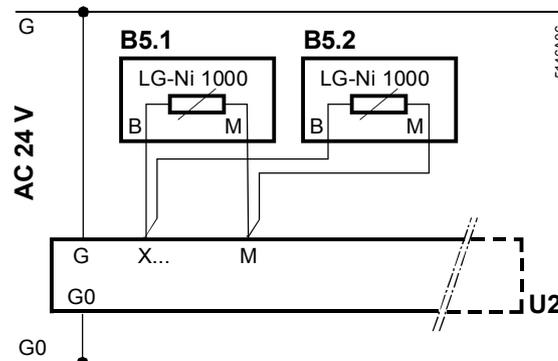


- U2 Signal converter SEZ220
- B5... Room temperature sensor QAA24


For other connections on the input and output side, refer to " Preprogrammed standard applications ".

## Dimensions

### SEZ220


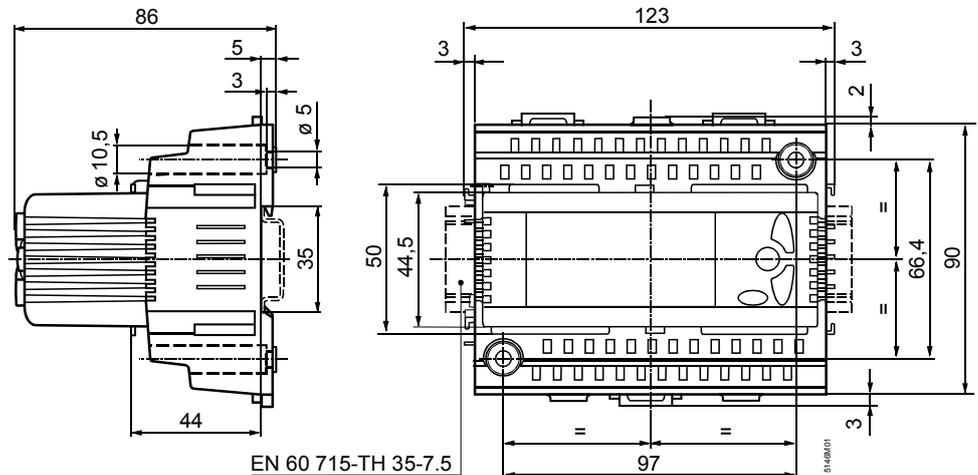


Mounting frame

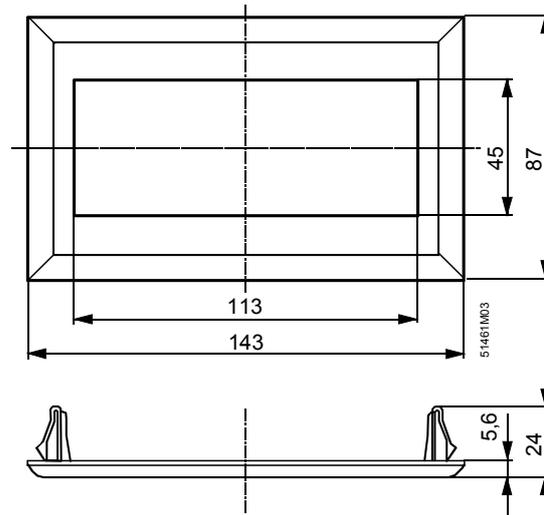

Panel cutout if controller shall be wired prior to mounting:

Panel cutout if controller shall be wired after mounting:

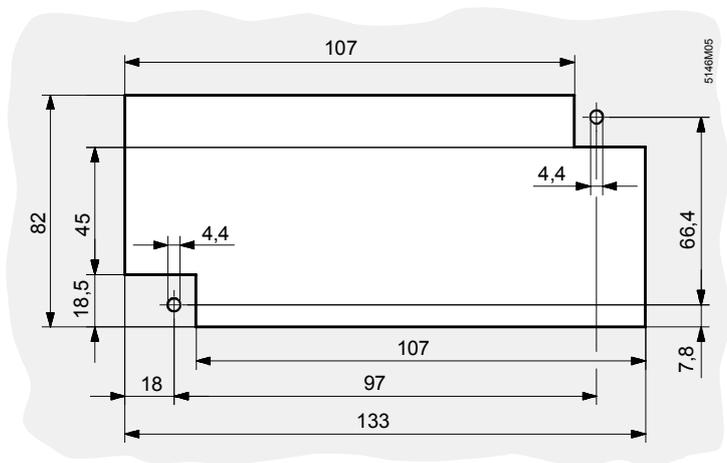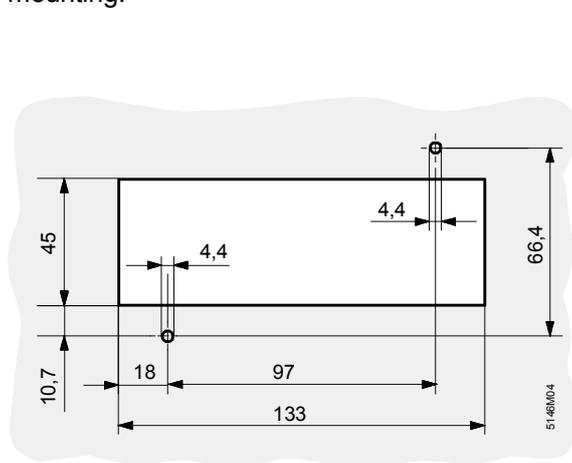

Dimensions in mm

Preprogrammed standard applications

Notes

The connection diagrams assigned to the basic types are only examples.

Basic type	Description	Connection diagram
<b>M01</b>	Selection of minimum and maximum input signal from all present passive input signals	<p>5 x LG-Ni 1000</p> <p>Terminal block: G X1 M X2 M G1 X3 M X4 M G1 X5 M</p> <p>Terminal block: G0 G1 Y1 G0 G1 Y2 G0</p> <p>DC 0...10 V MIN (connected to G0)</p> <p>DC 0...10 V MAX (connected to G1)</p>

Basic type	Description	Connection diagram
<b>M02</b>	Selection of maximum input signal and calculation of average of all present passive input signals	<p>5 x LG-Ni 1000</p> <p>DC 0...10 V MAX</p>
<b>M03</b>	Selection of maximum input signal and calculation of average of all present active input signals	<p>5 x DC 0...10 V</p> <p>DC 0...10 V MAX</p>
<b>M04</b>	Selection of minimum input signal from 2 active input signals and 3 passive input signals	<p>2 x DC 0...10 V</p> <p>3 x LG-Ni 1000</p> <p>DC 0...10 V MIN</p>
<b>M05</b>	Calculation of average of 2 active input signals and 3 passive input signals	<p>2 x DC 0...10 V</p> <p>3 x LG-Ni 1000</p> <p>DC 0...10 V AVR</p>
<b>M06</b>	Selection of maximum input signals from 2 active input signals and 3 passive input signals	<p>2 x DC 0...10 V</p> <p>3 x LG-Ni 1000</p> <p>DC 0...10 V MAX</p>
<b>E01</b>	Calculation of enthalpy from 1 passive temperature signal and 1 active humidity signal	<p>DC 0...10 V</p> <p>LG-Ni 1000</p> <p>DC 0...10 V</p> <p>ENTH 1 [kJ/kg]</p>
<b>E02</b>	Calculation of enthalpy differential from 2 signal groups each with 1 passive temperature signal and 1 active humidity signal	<p>DC 0...10 V</p> <p>LG-Ni 1000</p> <p>DC 0...10 V</p> <p>ENTH D [kJ/kg]</p>

Basic type	Description	Connection diagram
<b>E03</b>	Calculation of absolute humidity and enthalpy from 1 passive temperature signal and 1 active humidity signal	
<b>E04</b>	Calculation of absolute humidity from 1 passive temperature signal and 1 active humidity signal	
<b>E05</b>	Calculation of dew point from 1 passive temperature signal and 1 active humidity signal	
<b>D01</b>	Doubling of signal for sequential control of pumps, valves and fans	<p>Legend  N1 = Controller (or active device)  U2 = SE2220 signal converter</p>
<b>D02</b>	Signal conversion from 1 passive temperature signal into 2 active signals	

Published by:  
Siemens Switzerland Ltd.  
Building Technologies Division  
International Headquarters  
Gubelstrasse 22  
6301 Zug  
Switzerland  
Tel. +41 41-724 24 24  
[www.siemens.com/buildingtechnologies](http://www.siemens.com/buildingtechnologies)

© Siemens Switzerland Ltd 2004  
Delivery and technical specifications subject to change