


3-point rotary actuator with emergency function for 2- and 3-way control ball valves

- Torque 5 Nm
- Nominal voltage AC 230 V
- Control: 3-point
- NRFD230A-3: Deenergised NC NRFD230A-3-O: Deenergised NO



Technical data				
Electrical data	Nominal voltage		AC 230 V, 50/60 Hz	
	Nominal voltage range		AC 198 264 V	
	Power consumption In op	eration	5 W @ nominal torque	
	At rest		3 W	
		vire sizing	16 VA	
	Connection		Cable 1 m, 4 x 0.75 mm ²	
	Parallel connection		Yes (Note performance data for supply!)	
Functional data	Torque Motor		Min. 5 Nm @ nominal voltage	
	Spring return		Min. 5 Nm	
	Direction of rotation Moto	r	Reversible with switch 🤼 / 🖍	
		ig return		
		FD230A-3	Deenergised NC, ball valve closed (A – AB = 0%)	
		FD230A-3-O	Deenergised NO, ball valve open (A – AB = 100%)	
	Angle of rotation Running time Motor Spring return Sound power level Motor Spring return Position indication		Max. 90°⊲	
			35 s / 90°⊲	
			≤20 s @ -20 50°C / max. 60s @ -30°C	
			≤45 dB (A)	
			≤62 dB (A)	
			Mechanical	
Safety	Protection class		II totally insulated □	
	Degree of protection EMC		IP54	
			CE according to 2004/108/EC	
	Low-voltage directive		CE according to 2006/95/EC	
	Certification		Certified to IEC/EN 60730-1 and IEC/EN 60730-2-14	
	Mode of operation		Type 1.AA	
	Rated impulse voltage Control pollution degree Ambient temperature Media temperature Non-operating temperature Ambient humidity Maintenance		4 kV	
			3	
			−30 +50°C	
			+5 +130°C (in ball valve)	
			-10°C with stem heating upon request	
			−40 +80 °C	
			95% r.h., non-condensating	
			Maintenance-free	
Dimensions / Weight Dimensions			See «Dimensions» on page 2	
	Weight		Approx. 2 kg (without ball valve)	

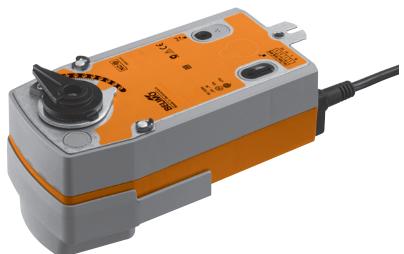

Safety notes



- The actuator has been designed for use in stationary heating, ventilation and air conditioning systems and is not allowed to be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- · Caution: Power supply voltage!
- It may only be installed by suitably trained personnel.
 All applicable legal or institutional installation regulations must be complied with.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · The cable must not be removed from the device.
- The device contains electrical and electronic components and is not allowed to be disposed
 of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Mode of operation The actuator moves the ball valve to the operating position at the same time as tensioning the

return spring. The damper is turned back to the safety position by spring force if the supply

voltage is interrupted.

Simple direct mounting Straightforward direct mounting on the ball valve with only one screw. The mounting position in

High operational reliability The actuator is overload-proof, requires no limit switches and automatically stops when the end

stop is reached.

Combination valve actuators Refer to the valve documentation for suitable valves, their permitted media temperatures and


closing pressures.

Electrical installation

Wiring diagram

Notes

- · Caution: Power supply voltage!
- Parallel connection of other actuators possible. Note the performance data.



Cable colours:

- 1 = blue
- 2 = brown 3 = white
- 4 = white


Direction of rotation


		NO L-	NC R-●	
		Reversin		
a (Y ₁)	b (Y ₂)	~	S =	
1		1.	11	A – AB = 100%
/_		stop	stop	
/_	1	1 0	1 0	A – AB = 0%
1	Ł	1 0	1 0	A - AD = 0%



Dimensions [mm]

Dimensional drawings

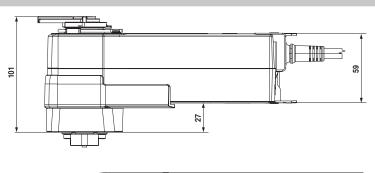

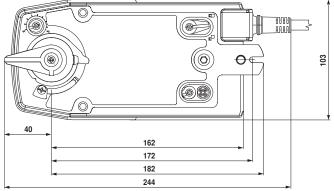

Further documentations

- Complete overview «The comlete range of water solutions»
- · Data sheets for control ball valves
- Installation instructions for actuators and/or control ball valves
- Notes for project planning (hydraulic characteristic curves and circuits, installation regulations, commissioning, maintenance etc.)

BELIMO

